


# Nature's Generator Wind Turbine

## User Manual

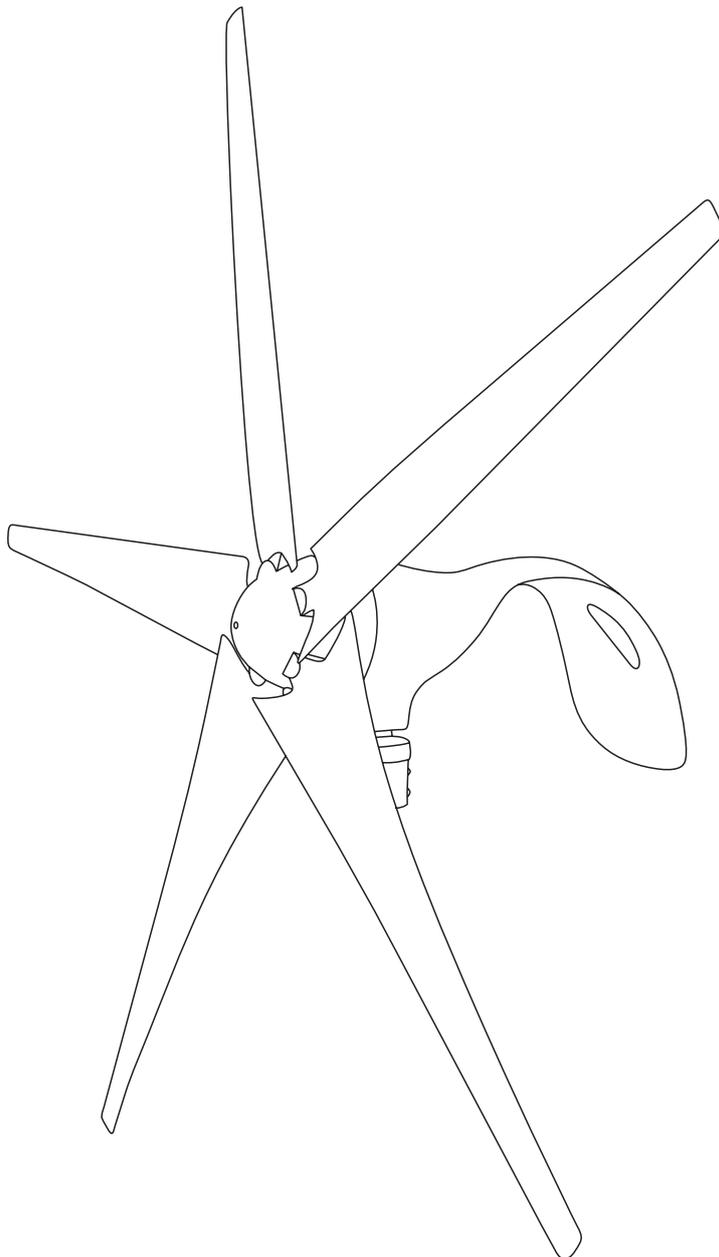

# Nature's Generator Wind Turbine

## Contents

<b>1.0 Important Safety Instructions</b>	<b>1</b>
1.1 Safety Instructions	1
1.2 General Requirements	1
1.3 Warning	2
1.4 Caution	2
1.5 Storage Instruction	2
1.6 INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS	3
1.7 WARNING: GROUNDING INSTRUCTIONS	3
<b>2.0 Unpack Your Nature's Generator Wind Turbine</b>	<b>4</b>
<b>3.0 Get to Know Your Nature's Generator Wind Turbine</b>	<b>6</b>
<b>4.0 Using Your Nature's Generator Wind Turbine</b>	<b>8</b>
4.1 How to choose the location	8
4.2 How to choose the tower	8
4.3 How to Install your Nature's Generator Wind Turbine	9
4.4 How to connect your Nature's Generator Wind Turbine to your Nature's Generator	13
<b>5.0 MAINTENANCE</b>	<b>14</b>
<b>6.0 Troubleshooting</b>	<b>14</b>
<b>7.0 Technical Specifications</b>	<b>15</b>
<b>8.0 Notice</b>	<b>15</b>
<b>9.0 Limited Warranty</b>	<b>16</b>

## **1.0 Important Safety Instructions**

### **1.1 Safety Instructions**

1.1.1 Read these instructions.

1.1.2 Keep this user manual in a safe and accessible place.

1.1.3 Take note of all warnings to avoid injury or damage.

1.1.4 Follow all instructions.

1.1.5 The safety instructions provided herein are for illustrative purposes that include but are not limited to those listed in this manual. Actual operation shall comply with all applicable safety standards.

1.1.6 Always operate or store the equipment in the conditions specified in this manual. The installation and ambient conditions must comply with the regulations in the relevant national and local standards.

1.1.7 Avoid unauthorized disassembly, equipment replacement, or modification of software codes.

1.1.8 Nature's Generator shall not be liable for the equipment damages, personal injury, property loss or other damages resulting from the following circumstances:

- Force majeure events such as earthquakes, fires, storms, floods, or mudslides.
- Damages caused by improper handling and installation.
- Damages resulting from inadequate storage conditions as specified in the manual.
- Hardware or data damage caused by customer negligence, improper operation, or intentional actions.
- System damage caused by third parties or customers.
- Adjustments, changes, or removal of labels in violation of this manual.

1.1.9 This product may only be used outdoor and that no indoor use is allowed under any conditions.

### **1.2 General Requirements**

1.2.1 Do not install, use or maintain this equipment near water.

1.2.2 Do not install, use and maintain this equipment in adverse weather conditions such as lightning, rain, storm, snow and earthquake.

1.2.3 Keep this equipment away from heat sources.

1.2.4 Do not insert foreign objects into or block any ventilation openings.

1.2.5 Always turn off the power source before starting any electrical work.

1.2.6 Do not use near flammable gases or fumes or other equipment that produce a large amount of heat.

1.2.7 Do not store this equipment with flammable or explosive materials.

1.2.8 Do not place the equipment on an unstable or inclined surface.

1.2.9 Use the equipment for its intended purpose and avoid stacking objects on top of it during storage or use.

1.2.10 Keep the system out of the reach of children and pets.

1.2.11 Only use attachments/accessories approved by the manufacturer.

1.2.12 Regularly inspect the equipment and its accessories for damage or deterioration.

1.2.13 Refer all servicing to qualified service personnel. Servicing is required when the equipment has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the equipment, the equipment has been exposed to rain or moisture, has been dropped or does not operate normally.

1.2.14 The equipment should not be exposed to dripping or splashing, and no objects filled with liquids, such as drinking glasses or vases, should be placed on the equipment.

1.2.15 The transportation, wiring, installation and maintenance shall comply with all applicable laws, regulations and standards.

1.2.16 Do not make changes or modifications to the equipment's structure, installation sequence, etc.

1.2.17 Position the system on the flat surface and firmly secure it to a wall or other solid objects.

1.2.18 After installing the equipment, remove the idle package materials from the site such as cartons, foam, plastic, nylon ties, etc.

### **1.3 Warning**

1.3.1 The rotating blades present the most serious mechanical hazard. The tip of the rotating blades may be moving at the speed over 300 miles per hour. The blades are almost invisible and may cause serious injuries. You should NOT install the turbine where anyone could come in touch with the rotating blades.

1.3.2 The Nature's Generator Wind Turbine generates the electricity and thus the inherent personal injury from electricity exists. Be always cautious when connect cables and connect to Nature's Generator.

1.3.3 When replacement parts are required, make sure that the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, personal injury, or other hazards.

1.3.4 After completing any service or repair to this device, ask the service technician to perform routine safety checks to determine that your Nature's Generator Wind Turbine is in correct operating condition.

1.3.5 These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

### **1.4 Caution**

1.4.1 Stop using the Nature's Generator Wind Turbine and refer servicing to qualified service personnel under the following conditions:

- If your Nature's Generator Wind Turbine has been dropped or damaged in any way.
- When your Nature's Generator exhibits a distinct change in performance.

1.4.2 Your Nature's Generator Wind Turbine may contain materials that are regulated for environmental reasons. Your Nature's Generator Wind Turbine also contains materials that can be recycled and reused. To help protect the environment, contact your local authorities for information about disposal or recycling and about finding a recycler in your area before you dispose of your Nature's Generator Wind Turbine.

### **1.5 Storage Instruction**

1.5.1 Make sure the place where to store the system is well ventilated and spacious.

1.5.2 Do not store the system in flammable or explosive environments.

1.5.3 Keep the system out of the reach of children and pets.

1.5.4 Do not stack anything on top of the equipment during storage.

1.5.5 Avoid exposing the equipment to rain, humidity or direct sunlight.

1.5.6 Store the product in the conditions described in this manual.

## **1.6 INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS**

### **IMPORTANT SAFETY INSTRUCTIONS**

1.6.1 WARNING – When using this product, basic precautions should always be followed, including the following:

- a. Read all the instructions before using the product.
- b. Wait until a calm day to install the Nature's Generator Wind Turbine.
- c. The equipment must be installed by a qualified electrician in compliance with all applicable electrical codes!
- d. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- e. To reduce the risk of injury, close supervision is necessary when the product is used near children.
- f. To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the cable.
- g. Do not put fingers or hands into the product.
- h. Avoid the sharp edges on the blades.
- i. Readjust and tighten the screws and bolts as needed after installation.
- j. Your Nature's Generator Wind Turbine must be installed in accordance with this manual along with local and national building code. Incorrect installation may void warranty.
- k. Your Nature's Generator Wind Turbine blades spin at a potentially dangerous speed. Never approach turbine in motion.
- l. Use of an attachment not recommended or sold by manufacturer may result in a risk of fire, electric shock, or injury to persons.
- m. Do not disassemble the equipment, take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.

### **SAVE THESE INSTRUCTIONS**


#### **1.7 WARNING: GROUNDING INSTRUCTIONS**

1.7.1 When the local codes require, this product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.


1.7.2 WARNING – Improper connection of the equipment grounding conductor is able to result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the product is properly grounded.

## 2.0 Unpack Your Nature's Generator Wind Turbine

### 2.1 Nature's Generator Wind Turbine main body

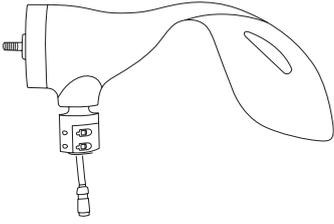


### 2.2 Hub

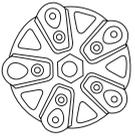


### 2.3 Nose cone




### 2.4 Blades x 5

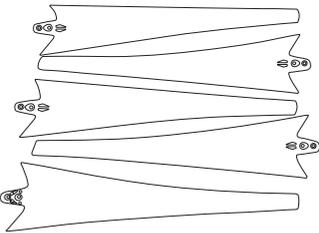

### 2.5 100-foot-long wind turbine cable

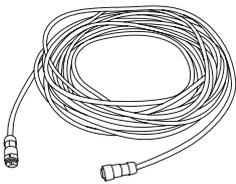

### 2.6 Controller box

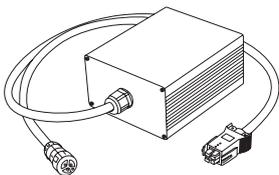

## 2.7 This user manual



## 2.8 Accessory bag that includes



M6 bolt x 12 (2 spare pieces)



M6 nut x 12 (2 spare pieces)



M6 flat washer x 12 (2 spare pieces)



M6 lock washer x 12 (2 spare pieces)




M16 lock nut x 1



M16 lock washer x 1



Rubber pad x 1

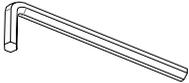


Hex key 8mm



Hex key 6mm





Hex key 5mm

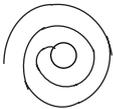

Ground line

### 3.0 Get to Know Your Nature's Generator Wind Turbine

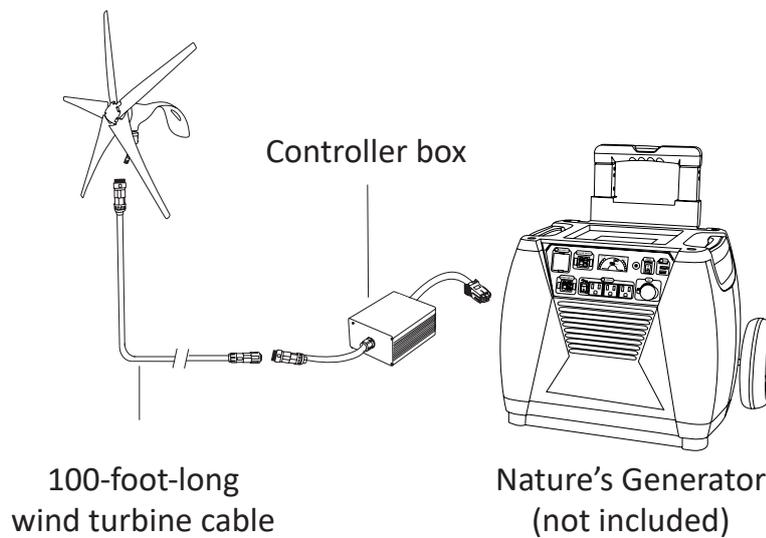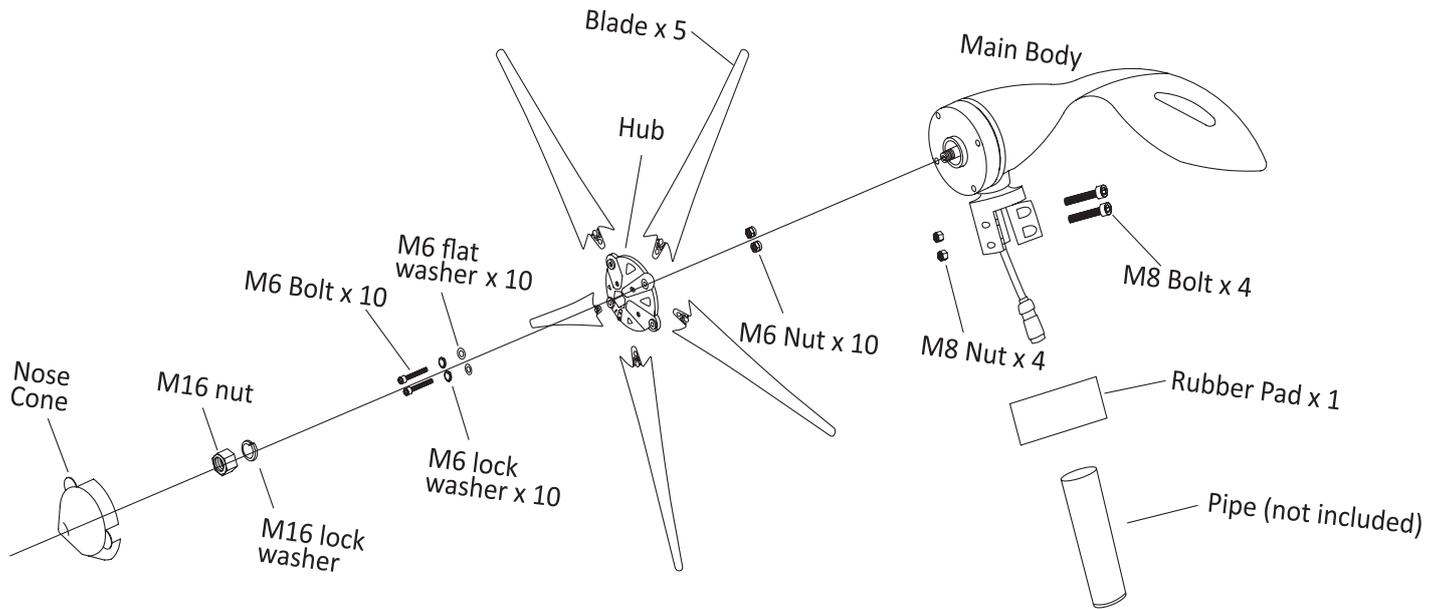

### 3.1 Complete Electrical System


Your Nature's Generator Wind Turbine comes with 100 foot long wind turbine cable and controller box. It is a complete electrical system to recharge your Nature's Generator.

### 3.2 Built-in Protections

Your Nature's Generator Wind Turbine controller box has built in over current protection and over voltage protection that prevent possible damage to your Nature's Generator.


### 3.3 Grounding

Every wind turbine and turbine tower need to be grounded at the tower base. Grounding the tower at its base may help prevent shocks to persons touching the tower due to lightning or electrical faults. Please take the time to review the National Electrical Code (NEC) and local building and zoning regulations for complete requirements. Your Nature's Generator Wind Turbine has a grounding cable included for this purpose.

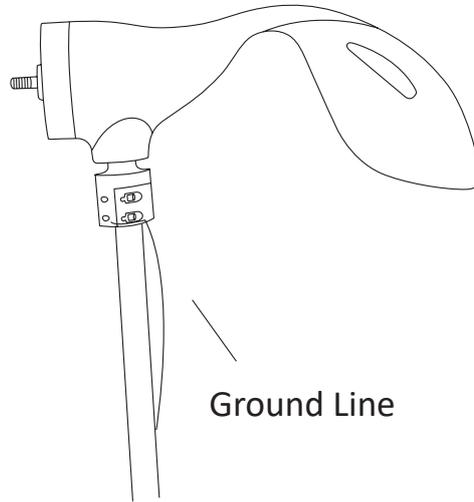

### 3.4 Expandability

Your Nature's Generator Wind Turbine can be connected to another Nature's Generator Wind Turbine to double the charging speed by using dual controller box. Please visit [www.naturesgenerator.com](http://www.naturesgenerator.com) or contact Customer Support line at 800-975-7909 or email us at [support@naturesgenerator.com](mailto:support@naturesgenerator.com).

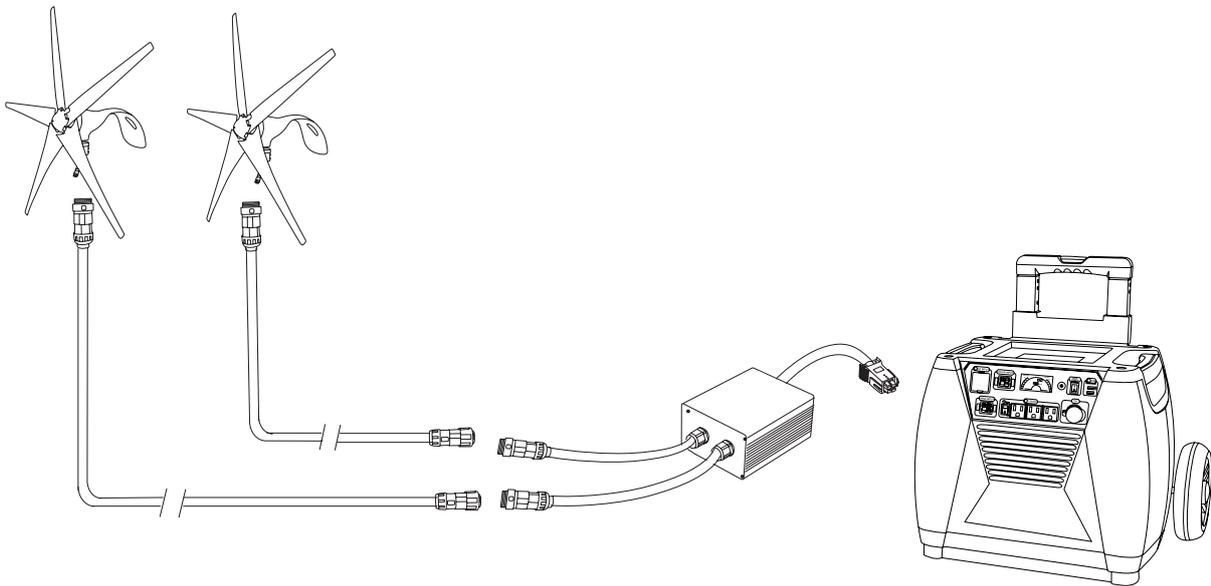


## **4.0 Using Your Nature's Generator Wind Turbine**

### **4.1 How to choose the location**

The wind speed has dramatic effects on your Nature's Generator Wind Turbine. The location shall be carefully considered to achieve the optimal performance of your Nature's Generator Wind Turbine, prior to the mounting of your Nature's Generator Wind Turbine. Each installation is unique and often a compromise among surrounding environment, distance between your Nature's Generator Wind Turbine and your Nature's Generator, zoning requirements, budget and etc.

In general terms, the higher your Nature's Generator Wind Turbine can be mounted, the greater the air flow will be and thus the better power production will be. However, towers are expensive and can easily exceed the cost of the turbine. The minimum recommended tower height is 20ft to 30ft above nearby obstructions as shown below. The obstructions create turbulence which reduces the efficiency of the wind turbine may accelerate wear and tear of your Nature's Generator Wind Turbine.

Safety must be the primary concern when selecting the mounting location. Install your Nature's Generator Wind Turbine so there is no possibility of accidental contact with rotating blades even if it requires installing the wind turbine in a less than ideal location. Safety has precedence over efficiency.

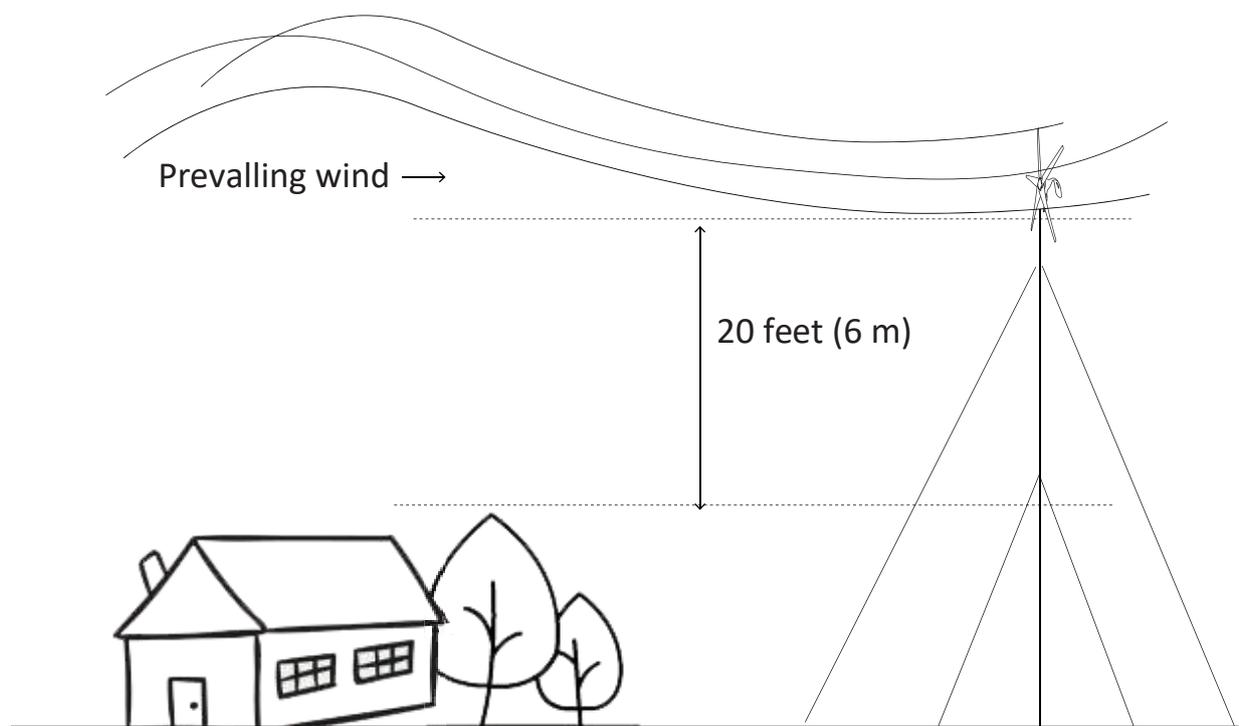

### **4.2 How to choose the tower**

Your Nature's Generator is designed to mount on nominal 1.5 inch schedule 40 steel tubing or piping. The outside diameter of the tubing or piping shall be around 1.875 inch to 1.900 inch. The steel tubing or piping should be available through your local hardware store. Under no circumstances should plastic pipe be used to construct a tower. Towers must be capable of withstanding 160 pounds of load in the horizontal direction at the wind turbine.

### 4.3 How to Install your Nature's Generator Wind Turbine


Caution: Choose a calm day and have someone available to help during the installation process.

Caution: The blades edges are sharp. Please handle carefully.


Caution: Do not assemble the blades before the body is mounted on the pipe or tower.

Caution: Do not connect your Nature's Generator Wind Turbine with Nature's Generator until all installation has been completed.


Step 1: Run the wind turbine cable through the pipe and drag the connector close to the Nature's Generator. The female connector shall be close to your Nature's Generator Wind Turbine and the male connector shall be close to your Nature's Generator.

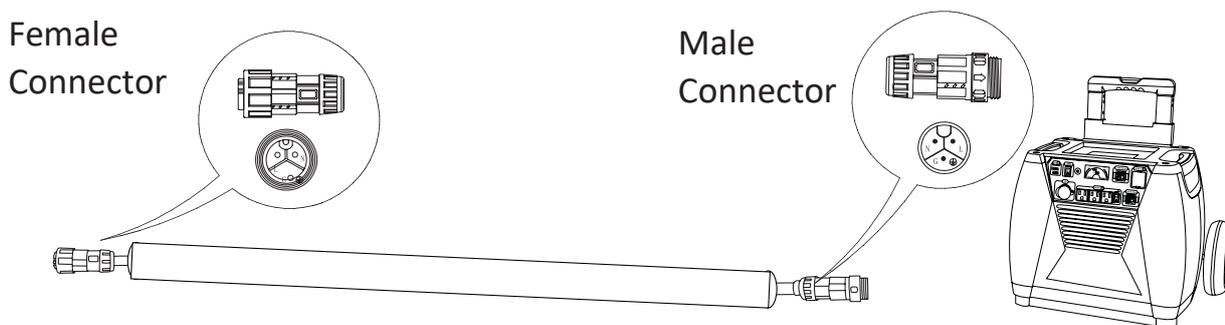


Step 2: Connect the wind turbine cable and your Nature's Generator Wind Turbine by pushing and twisting the connectors.

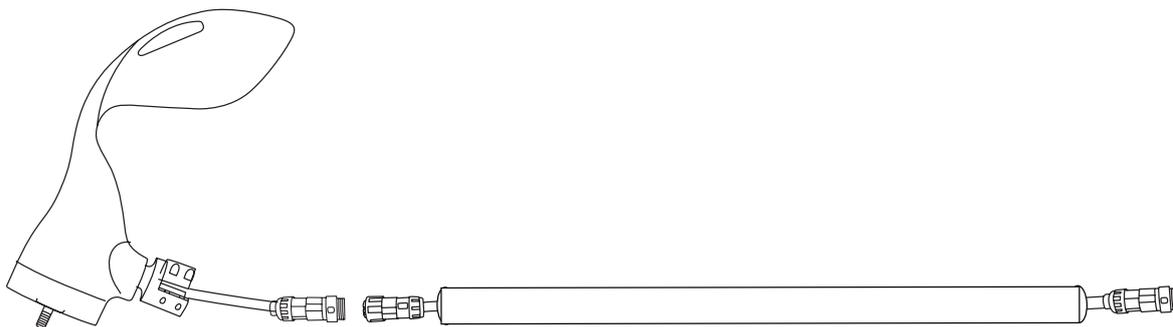


Step 3: The rubber gasket that is stored inside of the yaw and the included rubber pad help to prevent the the yaw from contacting the pipe directly. The rubber gasket and rubber pad will assist in reducing the transmission of noise and vibration down the pipe. Slide the yaw shaft all the way down over the top of the pipe and be careful not to pinch the cable. There may be some slight variances of the thickness or size of the pipe from different makers or models. Please adjust the size of rubber pad as needed.

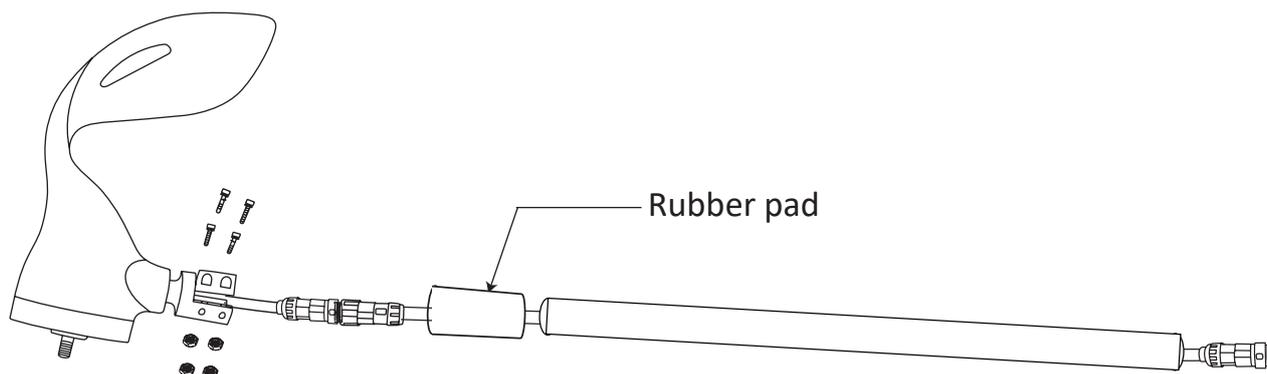

Step 4: Firmly tighten the yaw clamp bolts with the 6mm hex key. Be sure that your Nature's Generator Wind Turbine is securely attached to the pipe.

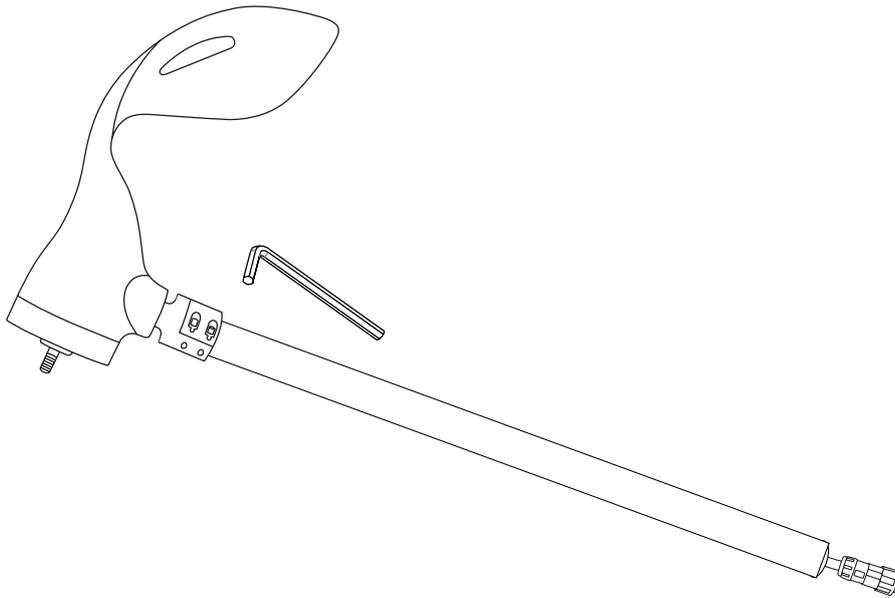


Step 5: Place one of the blades on one of the hub socket. Place a lock washer and then a flat washer on the bolt and then insert the bolt through the blade and the socket. Place a nut on the other side of socket and tighten the bolt with the 5mm hex key. Repeat this process on all five blades. Make sure the lock washer and flat washer are placed in the right order. The blades will become loose if it is not installed properly.

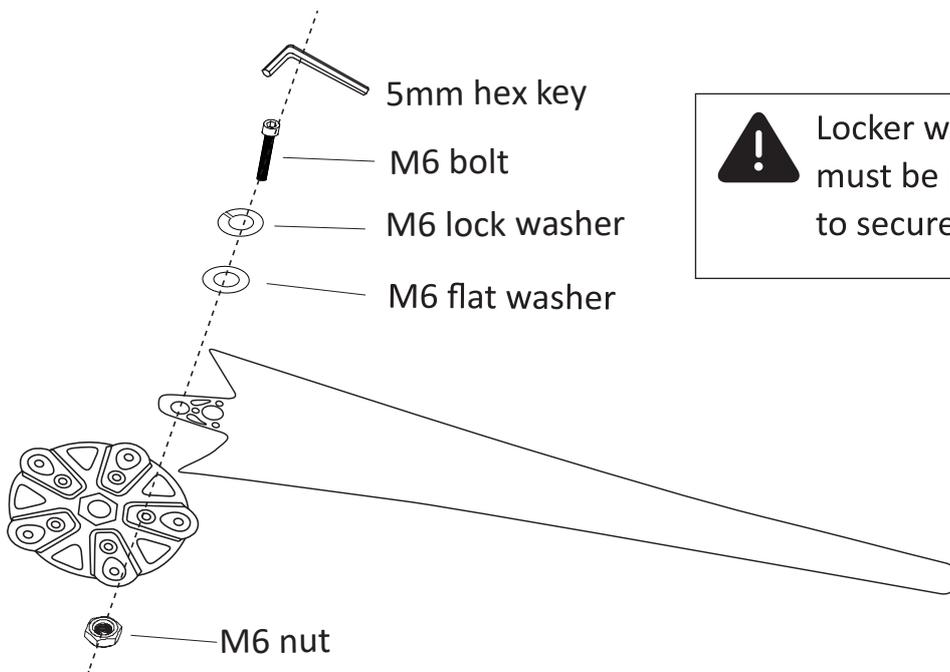


 Locker washer and flat washer must be placed in the right order to secure the blades in place.


Step 6: Slide the blade assembly onto the rotor shaft and place the lock washer and lock nut on the shaft. Make sure the lock washer is right next to the lock nut.

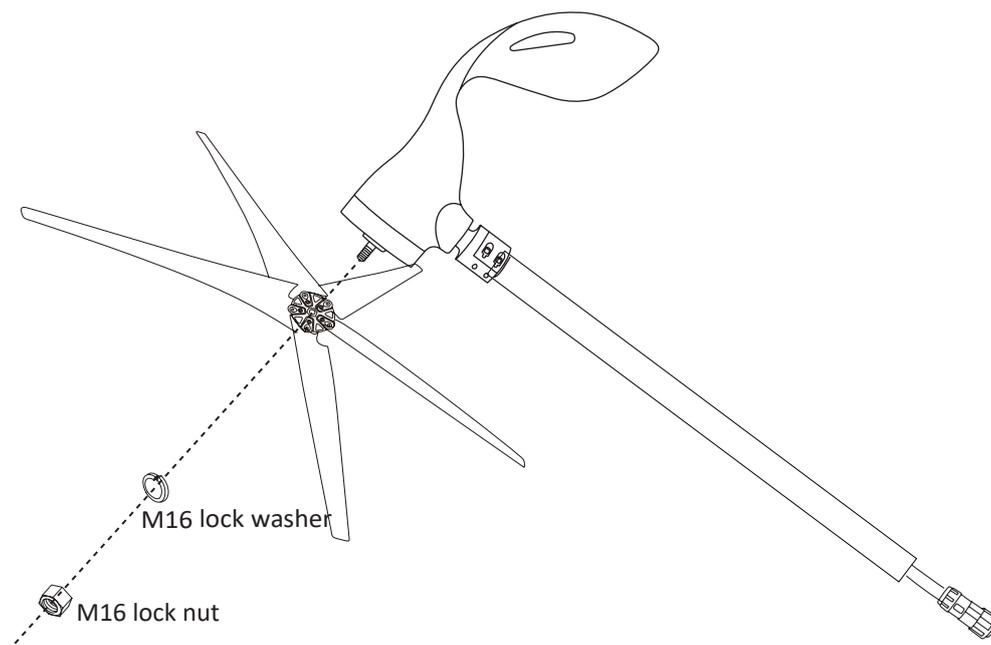

Step 7: Insert the 8mm hex key into the rotor shaft. Hold the blade assembly and tighten the M16 nut by turning the 8mm hex key counter clockwise. If needed, please use the extender (not included) to extend 8mm hex key to tighten the lock nut. Finally, spin the blades slowly to be sure they turn freely and the hub does move in along the rotor sha.

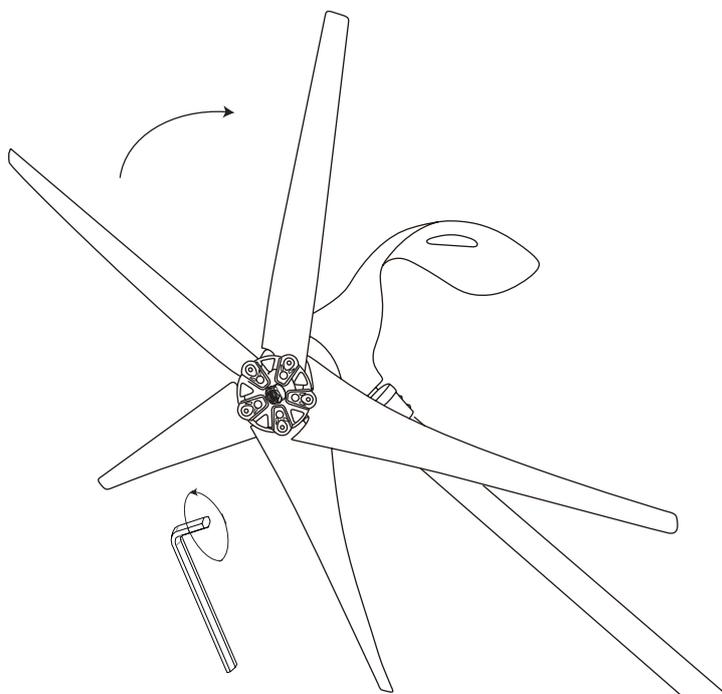


Step 8: Place the nose cone over the center line of the blade assembly and snap the nose cone into place.

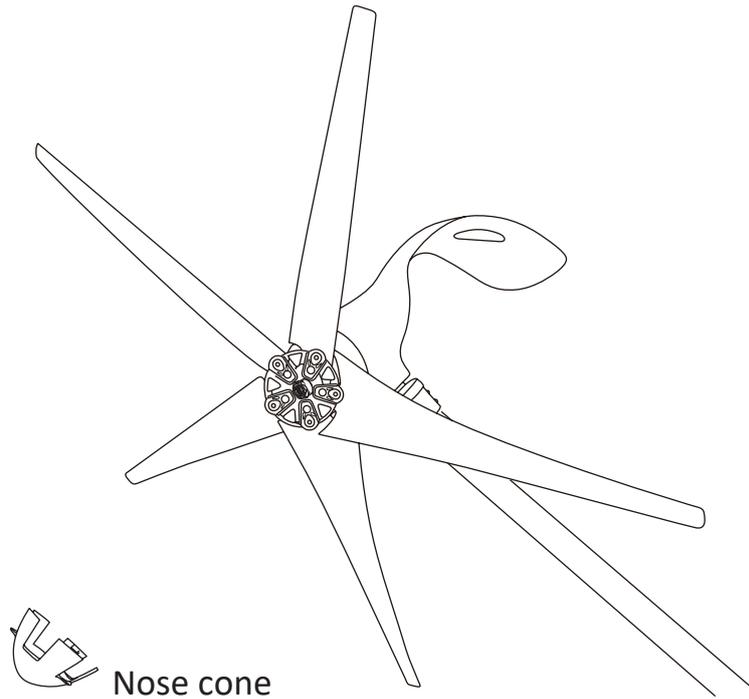

Step 9: Carefully raise the tower and secure the base and/or cables.

#### 4.4 How to connect your Nature's Generator Wind Turbine to your Nature's Generator


Step 1: Connect the wind turbine cable to the round connector from one side of the controller box by pushing and twisting the connectors.

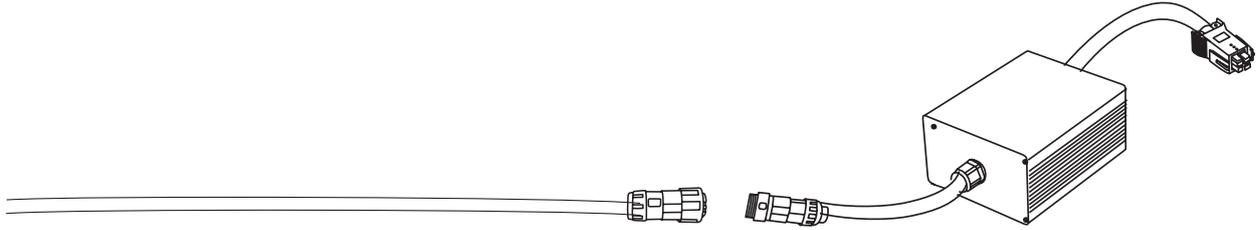

Step 2: Connector the square connector from the other side of controller box to your Nature's Generator "WIND INPUT" port.



Step 3: When your Nature's Generator Wind Turbine spins at certain speed, you will see the whole display on your Nature's Generator lights up, if your Nature's Generator main power is switched off. It means your Nature's Generator Wind Turbine is recognized by your Nature's Generator, but it is not powerful yet to recharge your Nature's Generator. When your Nature's Generator Wind Turbine spins at proper speed, you will see the wind turbine icon on the display illuminates and battery bar starts running. It means your Nature's Generator Wind Turbine is recharging your Nature's Generator.

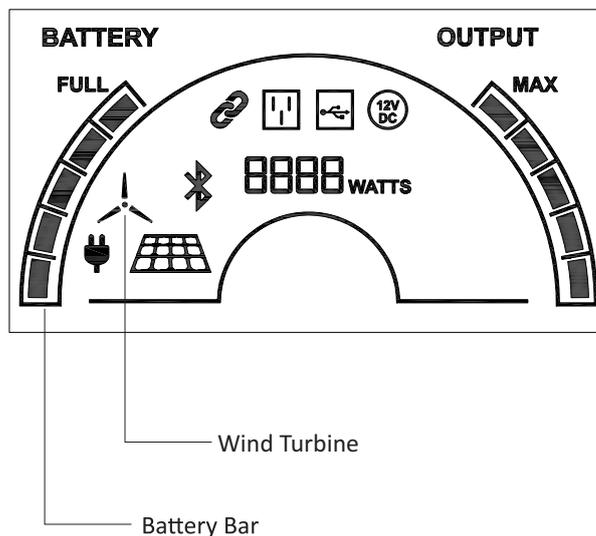

## 5.0 MAINTENANCE

Your Nature's Generator Wind Turbine has been designed to run for long periods without requiring any maintenance. Performance will be enhanced if you periodically inspect your system. Review the following simple maintenance procedures and implement every six months.



**Caution: Do not go near the wind turbine during operation.**

- Check blades for superficial damage. Replace blades if damaged. It is important not to use blades that are damaged, as you will lose overall balance, resulting in a decrease in efficiency. Should you notice damage to the blades, you must replace all 5. The blades are balanced as sets.
- Check the blade bolts and the nut for tightness.
- Check nose cone for cracks and tighten nuts.
- Wipe any excess dirt build-up from blades.
- Check electrical connections to make sure they are tight and free from corrosion.
- Lubricate the bearing to reduce the friction.

## 6.0 Troubleshooting



**Caution: You may require an extra person to assist with these tests.**

- a. Remove the blade and hub from your Nature's Generator Wind Turbine.
- b. Drain your Nature's Generator to show only one bar or two bars of battery level.
- c. Connect your Nature's Generator Wind Turbine to your Nature's Generator. And make sure your Nature's Generator main power is switched off.
- d. Set your power drill at speed mode and use an 8mm hex drive bit (not included, please purchase separately) to spin the rotor shaft.
- e. You will see the LCD display on your Nature's Generator lights up and then your wind turbine icon illuminates and the battery bar starts running. It means your Nature's Generator Wind Turbine should be recharging your Nature's Generator fine. You should also feel resistance on the rotor shaft.

If you have any questions on the trouble shooting procedures, please do not hesitate to contact our Customer Support line at 800-975-7909 or email us at [support@naturesgenerator.com](mailto:support@naturesgenerator.com).

## **7.0 Technical Specifications**

### Material:

Wind turbine blades: fiberglass nylon composite

Wind turbine body: cast aluminum alloy with powder coating

Wind turbine cable: 12AWG pure copper cable

### Connectors:

Wind turbine cable connectors: weatherproof M19 3P connectors.

Wind input connectors: Anderson connectors

Yaw: fits 1.5 Inch schedule 40 pipes or towers

### Power Rating:

Rated power: 150 watts @ 27 MPH

Maximum wind speed 110 mph

### General:

Rotor diameter: 51 in / 1.3 m

Weight 22 lbs/10 kg not including cables and controller box.

Certifications: CE Rohs

## **8.0 Notice**

Nature's Generator products, services, and features are subject to the agreed-upon terms and conditions during purchase. Please note that some products, services, or features described in this manual may not be available under your purchase contract. Unless otherwise specified in the contract, Nature's Generator makes no representations or warranties of any kind, express or implied, with respect to the contents of this manual.

The contents of this manual are subject to change without notice. Please get the latest version from: <https://naturesgenerator.com/pages/help-center> If you have any questions or concerns about this manual, please contact Nature's Generator support for further assistance.

## **9.0 Limited Warranty**

### **9.1 One Year Limited Warranty**

Natures Generator Inc. warrants to you, the original purchaser of this new product, that the product shall be free of defects in the original manufacture of the material or workmanship for a period of one (1) year from the original date of your purchase of the product ("Warranty Period"). This product must be purchased from an authorized dealer and packaged with this warranty statement. This warranty does not cover refurbished product.

### **9.2 What does this Warranty Cover?**

During the Warranty Period, if the original manufacture of the material or workmanship of the product is determined to be defective by an authorized dealer, Natures Generator, Inc. will (at its sole option): (1) repair the product with new or rebuilt parts; or (2) replace the product at no charge with new or rebuilt comparable products or parts. Products and parts replaced under this warranty become the property of Nature's Generator and are not returned to you. If service of products or parts are required after the Warranty Period expires, you must pay all labor and parts charges. This warranty lasts as long as you own your product during the Warranty Period. Warranty coverage terminates if you sell or otherwise transfer the product.

### **9.3 How to Obtain Warranty Service?**

Please call 1-800-975-7909 Monday through Friday, 9:00AM to 5:00PM PST. You will be provided with a Return Merchandise Authorization (RMA) number and return instructions.

Send product to:

Natures Generator Inc  
3233 Mission Oaks Blvd. Ste N  
Camarillo, CA 93012

Please include the RMA number prominently displayed on the shipping box and include your name, phone number and address with the product inside the box.

### **9.4 Where is the Warranty Valid?**

This warranty is valid only to the original purchaser of the product in United States and Canada.

## **9.5 What our Warranty does not Cover?**

9.5.1 This warranty does not cover:

- Cosmetic damage
- Damage due to acts of God, such as lightning strikes
- Accident
- Misuse
- Abuse
- Negligence
- Commercial use
- Modification of any part of the product
- Damage due to incorrect operation or maintenance
- Connection to an incorrect voltage supply
- Attempted repair by anyone other than a facility authorized by Natures Generator Inc. to service the product
- Products sold as is or with all faults
- Consumables, such as batteries
- Products where the factory applied serial number has been altered or removed

9.5.2 REPAIR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. NATURES GENERATOR INC. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, INCLUDING, BUT NOT LIMITED TO LOST DATA, LOSS OF USE OF YOUR PRODUCT, LOST BUSINESS OR LOST PROFITS. NATURES GENERATOR, INC. PRODUCTS MAKES NO OTHER EXPRESS WARRANTIES WITH RESPECT TO THE PRODUCT, ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF AND CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE WARRANTY PERIOD SET FORTH ABOVE AND NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, WILL APPLY AFTER THE WARRANTY PERIOD. SOME STATES, PROVINCES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

Natures Generator Inc:

3233 Mission Oaks Blvd. Ste N

Camarillo, CA 93012

For customer service please call 1-800-975-7909

